

## Iverter *Multi-Zone* Wireless Remote Controller Programming Instructions

### Multi-Zone Programming Requirement

Follow the steps below to program ***EACH*** Air Handler Control:

1. Disconnect Power of outdoor unit and indoor unit.
2. Wait one (1) minute. Resume power to both indoor and outdoor units.
3. Use remote to turn Indoor unit **ON**. With remote turn Indoor unit **OFF TO STANDBY MODE**. Indoor unit display will be blank.
4. Remove batteries from Wireless Remote Controller.
5. Press **ON/OFF** button and wait until Wireless Remote Controller screen is blank.


**Note** **DO NOT POINT** Wireless Remote Controller at the Indoor Unit for steps 6 and 7.

6. Install batteries into Wireless Remote Controller.
7. Immediately press and hold **MODE, FAN and TIMER-ON** button for 3 seconds until Wireless Remote Controller enters **ENGINEERING MODE**.

**Note** **POINT REMOTE** at INDOOR UNIT for steps 8-12.

8. Press **UP** button until Wireless Remote Controller displays **F4**.
9. Press **MODE** button, Wireless Remote Controller displays **1**.
10. Press **TIMER-ON** button, while **1** is still shown on display. Wireless Remote Controller will show **F4**, Indoor Unit will beep once and display **01**.
11. Remove batteries. Push **ON/OFF** button screen will be blank.
12. Install batteries to exit **ENGINEERING MODE**. Operate A/C and Heat cycles to test remote.

### Iverter *Multi-Zone* Wireless Remote

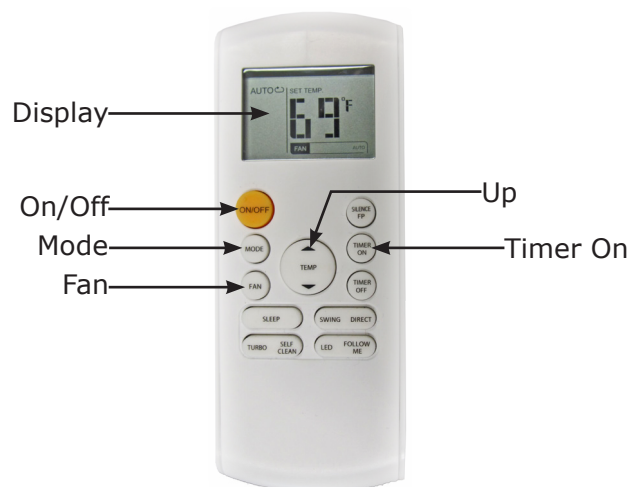

**ECR international**  
EST. 1928  
A Family of Heating & Cooling Brands.

ECR International, Inc.  
2201 Dwyer Avenue • Utica, New York 13501  
Phone: 800.253.9364 • Web: [emiretroaire.com](http://emiretroaire.com)